| Alarm Code 6C | Inverter Error Signal Detection |
|---|---|


- Alarm code is displayed on the master controller/ the 7-segment of O.U. display PCB / the 7-segment of I.U. PCB1.

★ If the following abnormality is detected on inverter , the compressor stops. The operation automatically restarts after three minutes. If this occurs again 6 times in the next 30 minutes, this alarm code is displayed.

① IPM Error(Cause code of inverter stoppage = 1)

② Step-Out Detection(Cause code of inverter stoppage = 21)

③ Ground Fault Detection from Compressor (Cause code of inverter stoppage = 12) only for 050-100 units

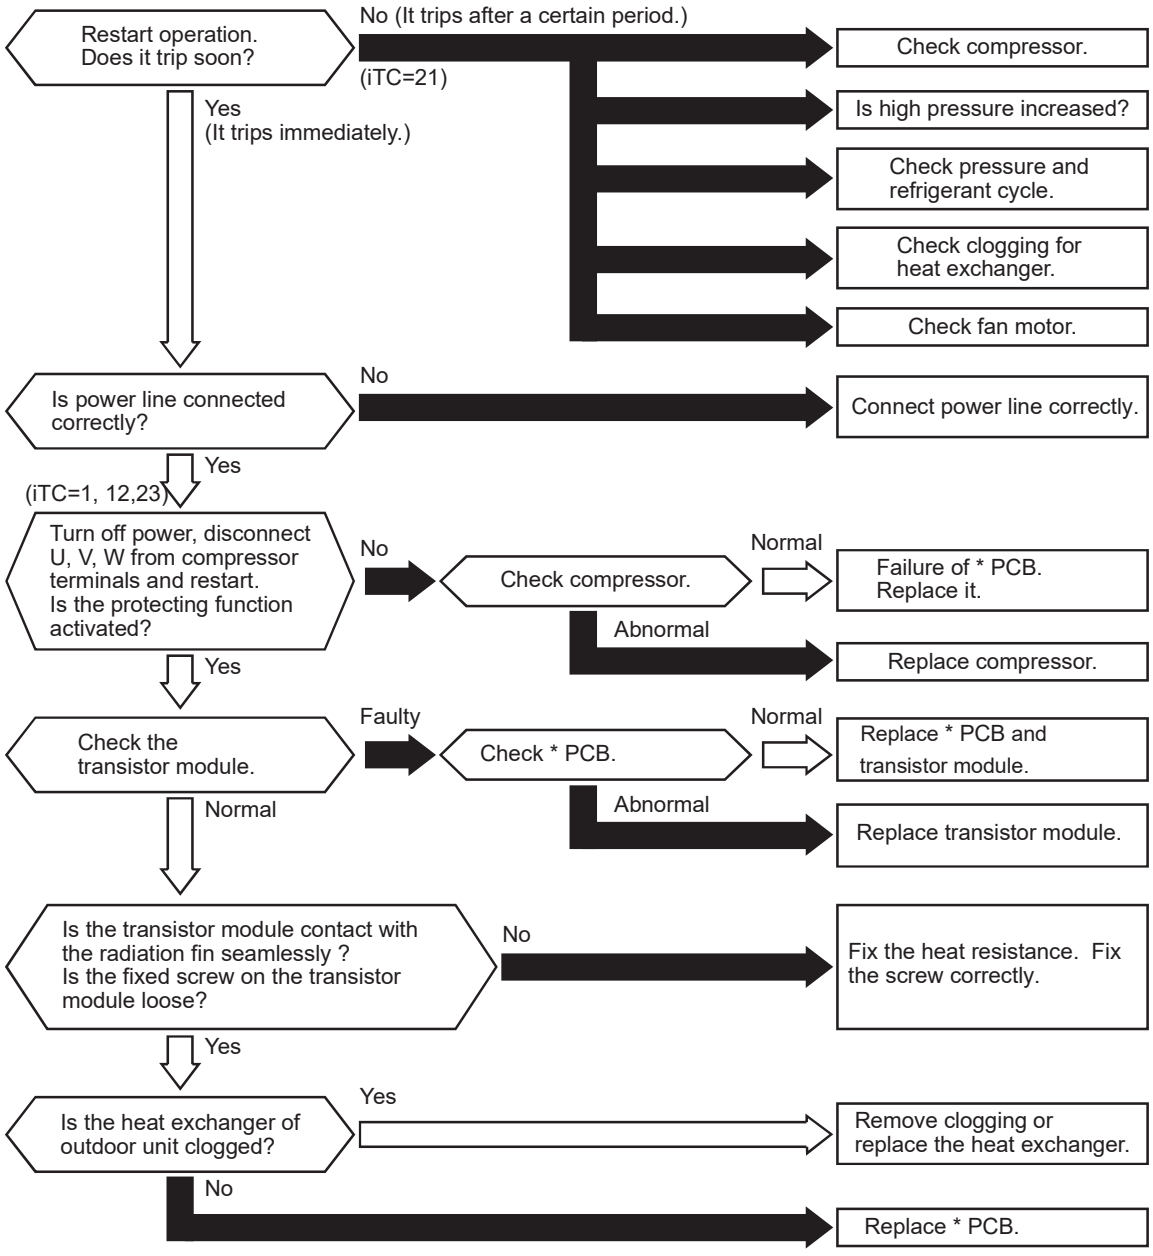


| Model | *PCB |
|---|---|
| 050-100 | inverter PCB |