

Alarm code	A5	Auxiliary sensor Abnormality (Room_amb1…7)

- Alarm code is displayed on the master controller/ the 7-segment of O.U. display PCB / the 7-segment of I.U. PCB1.
- This alarm code is indicated when a short circuit (less than 0.24kΩ) or disconnection (more than 840kΩ) of the thermistor is detected during the heating or cooling operation. The operation is automatically restarted when the malfunction is removed.
- Reset the unit to release the alarm.

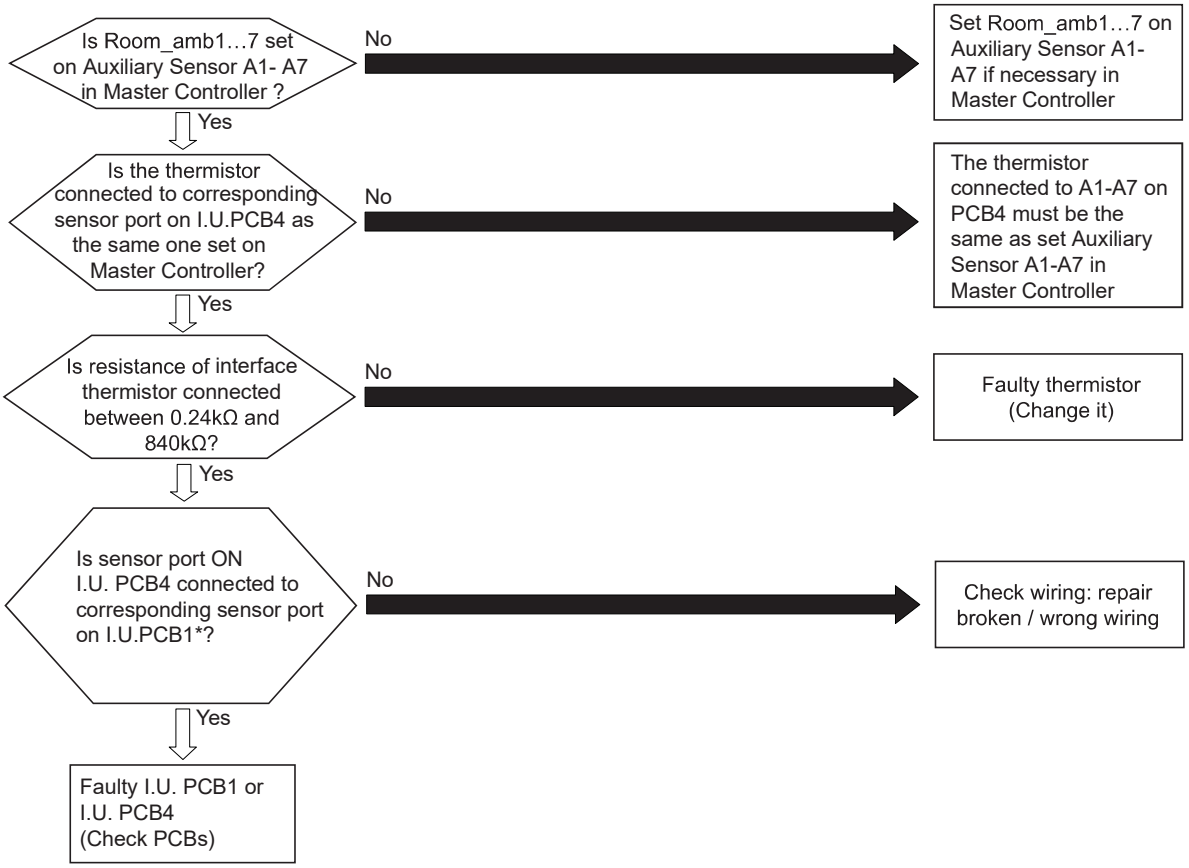

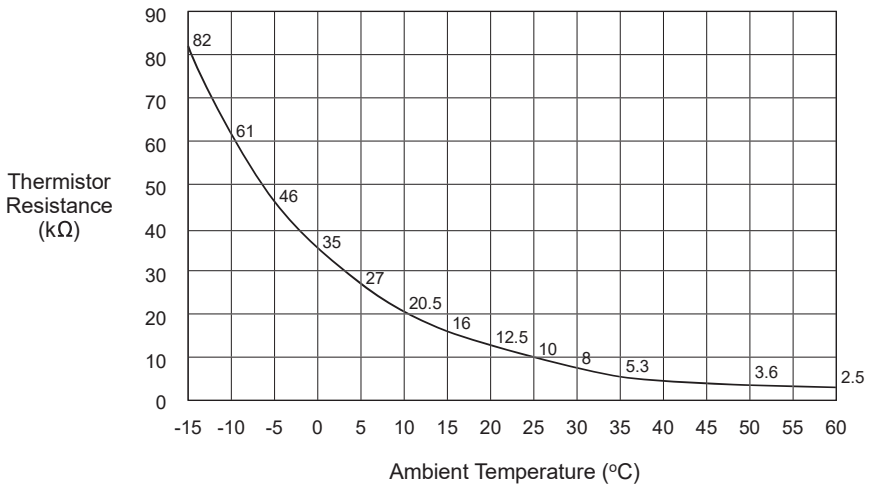

Thermistor Characteristics

*I.U. PCB4 connected to corresponding sensor port on I.U.PCB1

I.U. PCN4	I.U.PCN4	I.U.PCB1
A1	CN1-12	THM8
	CN1-11	
A2	CN1-8	THM10
	CN1-7	
A3	CN1-10	THM9
	CN1-9	
A4	CN2-10	THM6
	CN2-9	
A5	CN1-6	THM11
	CN1-5	
A6	CN1-4	THM17
	CN1-3	
A7	CN1-2	THM18
	CN1-1	