


Alarm code	18	Water Pressure Sensor(Pw) Abnormality

- Alarm code is displayed on the master controller/ the 7-segment of O.U. display PCB / the 7-segment of I.U. PCB1.
- This alarm code is indicated when the pressure sensor voltage decreases to 0.1V or less or increases to 4.9V or more during running.
- Reset the unit to release the alarm.

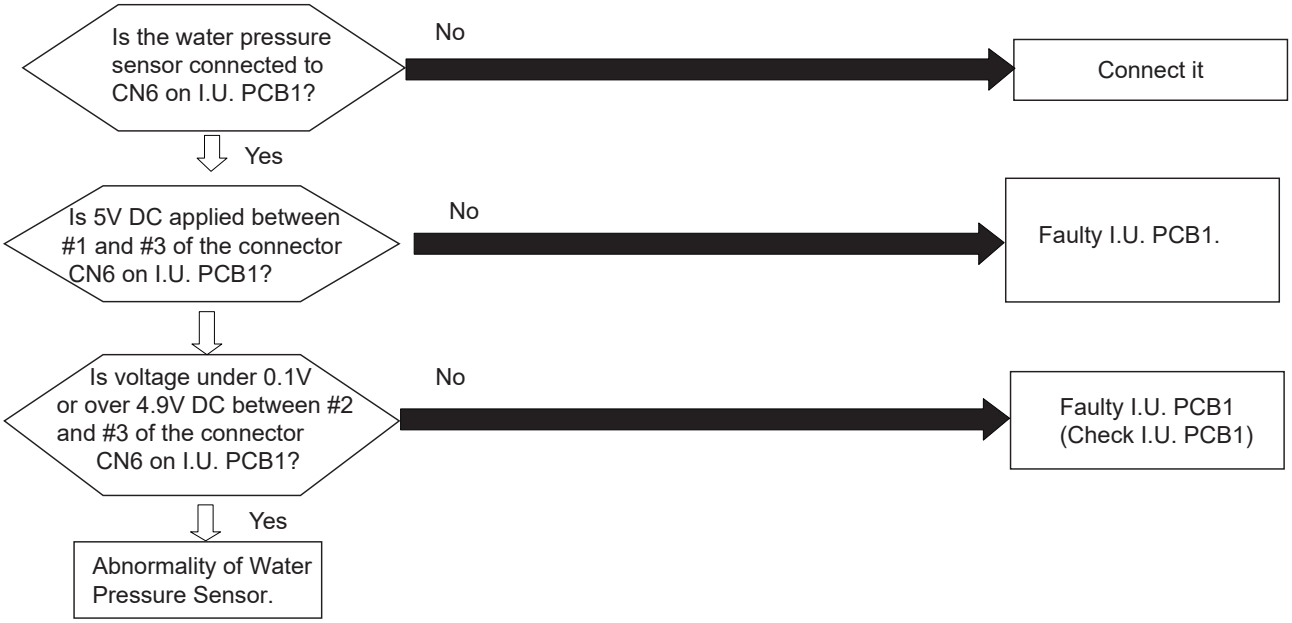

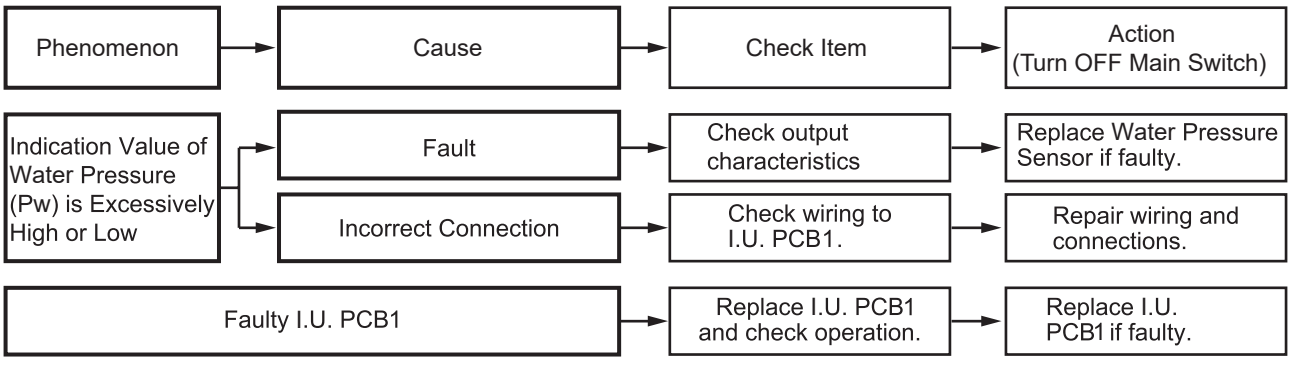

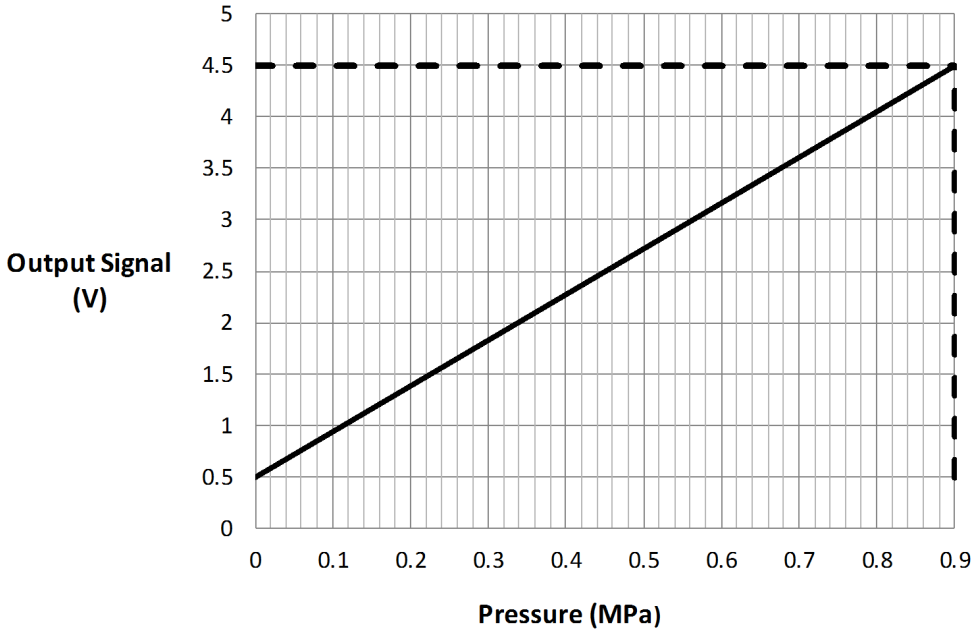

TRANSFER FUNCTION

Vout=4.4444*Pg+0.5 OR Vout=Vin*(0.8889*Pg+0.1)

Pg= MPa (GAUGE)